


PT-85 BLOWBACK TACTICAL

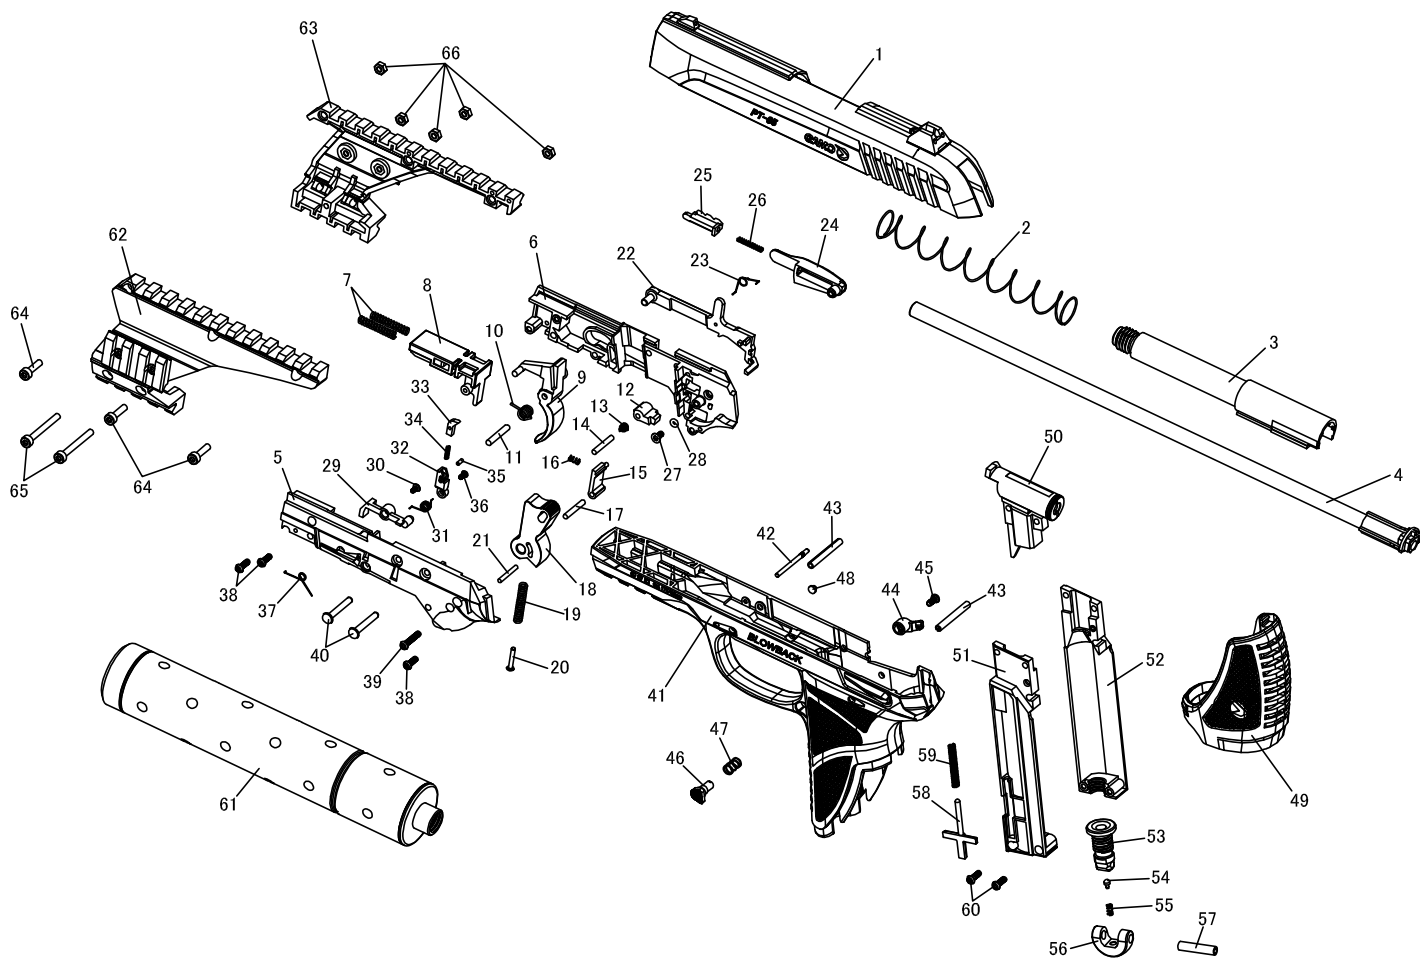

1. Slide Assembly

2. Recoil Spring

3. Outer Barrel

4. Inner Barrel Assembly

5. Mechanism Frame Left

6. Mechanism Frame Right

7. Buffer Spring

8. Slide Block

9. Trigger

10. Trigger Spring

11. Trigger Pin

12. Hammer Block Piece

13. Hammer Block Piece Spring

14. Hammer Block Piece Pin

15. Sear

16. Sear Spring

17. Sear Pin

18. Hammer

19. Hammer Spring

20. Hammer Spring Guide

21. Hammer Spring Pressure Pin

22. Trigger Bar

23. Trigger Bar Spring

24. Safety

25. Safety Lock

26. Safety Lock Spring

27. Safety Screw

28. Space O-ring

29. Hand Lever

30. Hand Lever Screw

31. Hand Spring

32. Hand

33. Pawl

34. Pawl Spring

35. Pawl Pin

36. Hand Screw

37. Hand Lever Spring

38. Mechanism Frame Screw (S)

39. Mechanism Frame Screw (L)

40. Valve Body Pin

41. Frame

42. Slide Block Pin

43. Mechanism Frame Pin

44. Magazine Catch

45. Magazine Catch Screw

46. Magazine Catch Button

47. Magazine Catch Spring

48. Red Dot

49. Grip Bottom

50. Valve Assembly

51. Puncture Frame Left

52. Puncture Frame Right

53. Puncture Adjuster Screw

54. Puncture Screw Click Plunger

55. Puncture Screw Click Plunger Spring

56. Puncture Adjuster Screw Knob

57. Puncture Screw Pin

58. Magazine Release

59. Magazine Release Spring

60. Puncture Frame Screw

61. Silencer Assembly

62. Mount Assembly left

63. Mount Assembly Right

64. Mount Screw (S)

65. Mount Screw (L)

66. Mount Screw Nut